

Spare Part List for 410-KTC250i		
NO	English Description	Qty/Unit
1	handle	1
2	Cover plate	1
3	Moving iron core installation guide rail	2
4	Terminal block	1
5	Copper connector	2
6	Single-phase rectifier bridge	1
7	Cable clamp	1
8	Frame plate	1
9	Caster	2
10	Foot fixing bracket	1
11	Quick socket	5
12	Ground cable	1
13	Welding cable	1
14	pointer	1
15	Leakage protection switch	1
16	Fan	1
17	Reactor assembly	1
18	Transformer assembly	1
19	Screw	1
20	handle	1

